





Single-engine, acro-capable RC plane



www.planeprint.com

the **ONLY** place where you can get original Planeprint STL files **legally!**







PLANEPRINT SEA FURY

RC Components

ENGINE Motors mit 400 to 500 Kv, ideal weight 280 to 340 grams

we use the **ROXXY BL OUTRUNNER C50-55-480KV 3D PERFORMANCE** You can also use any other motor that fits a 14x7 3 blade propeller!



PROP 14x7 3 blade (we use Master Airsrew), also possible 15x6 3 blade

BEC-CONTROLLER min 80 A (must fit the engine!)

- RECEIVER 7 Channel
- BATTERY 6S Lipo, 3000 4000 MaH (The battery should have a weight of 450 to 550 grams)

SERVOS 6 pieces like KST Clubman CM509MG or comparable (The servo should have metal gears, we advise against very cheap servos)

Dimensions:



SERVOLESS RETRACTS 2 pieces (we used: 40g Landing Gear, AliExpress – for 3.500g Models)





Required accessoires – basic equipment

Links to recommended accessories can be found on www.planeprint.com/seafury (scroll down)

- LW-PLA foaming! (cannot be replaced by PLA!), ~1600 grams
- Tough PLA, ~450 grams
- TPU A95 and LW-TPU Colorfabb VarioShore, ~100 grams

Materials

- CA super glue (liquid and liquid medium)
- CA activator
- Sortiment of Tapping screws Ø2mm
- Sortiment of Metal Screws Ø3mm
- Metal screw Ø4*40mm, 2 pieces
- Carbon tube Ø10mm*1000mm (inside 8mm), 3 pieces Cut the tubes to the following lengths (mm): 1 tube = 500, 500
 - 1 tube = 300, 3001 tube = 480, 480
 - 1 tube = 361, 361
- Carbon rod Ø3*1000mm, 4 pieces
 Cut the rods to the following lengths (mm): 480, 240, 220, 220,130, 100, 77, 62, 48, 48
- Steel wire Ø1*1000mm, 4 pieces
- Steel wire Ø4*80mm, 2 pieces
- Rod connection (hole for Ø1mm steel wire), 2 pieces
- Ball bearings 4x9x4mm, 4 pieces
- Servo extension cable 300mm, 2 pieces and 150mm, 4 pieces
- Self-adhesive Velcro tape
- Threaded inserts M3 (optional, see description gear)

Tools

Cutter knife, small Philips screwdriver, Sandpaper grain ~150, Metal saw, Needle nose pliers

PLANEPRINT SEA FURY





Metal screws Ø3mm













The development of a complex, airworthy RC flight model to express on any standard 3D printer is a very extensive process. **Therefore, we appeal to your fairness not to forward the STL data you have acquired to third parties.**

Thank you for your understanding and have fun with your PLANEPRINT MODEL!

Printing the parts – Printing profiles

This manual is constantly being improved and supplemented, we recommend downloading the **latest version** from our website **before building**.

To print all **PLANEPRINT** models **you need to set some basic profiles in Cura** (If you use another slicer, please set the same parameters).

You can find the description at www.planeprint.com/print

For this model you need the following profiles:



NOTE When printing the PLANEPRINT SEA FURY you should pay particular attention to a light weight of **each** individual part.

PROFILE P5_Gyroid

It is essential for the necessary stability of the LW parts printed with PROFILE_5 are as stable as possible. Please use a test part to check the strength by fracture tests. It must not break along the layer lines under any circumstances! Also note that the printing temperature for LW-PLA is as low as possible to obtain a wall thickness of 0.4 to 0.6 mm at a flow of 55 to 65 % (depending on brand and printer). Caution: at too high temperatures, LW-PLA becomes brittle and breaks more easily.





PLANEPRINT SEA FURY

The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts!



P1_Battery mount_sf.stl

MATERIAL PLA, Weight: ~ 7 g

ADDITIONAL SETTINGS

None required



P1_Canopy 1_sf.stl

MATERIAL PLA, Weight: ~ 6 g

ADDITIONAL SETTINGS

None required

TIP Use transparent filament

For optimum printing, transparent filaments should always be dried.



The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts!



P1_Canopy 2_sf.stl

MATERIAL PLA, Weight: ~ 26 g

ADDITIONAL SETTINGS

• use brim

TIP Use transparent filament

For optimum printing, transparent filaments should always be dried.

P1_Exhausts_sf.stl

MATERIAL PLA, Weight: ~ 6 g

ADDITIONAL SETTINGS

None required





PLANEPRINT SEA FURY

The information about the basic settings you can find on our website at PRINT. **Please note the additional settings for the individual parts!**



P1_Flap Parts_sf.stl

MATERIAL PLA, Weight: ~ 11 g

ADDITIONAL SETTINGS

None required



P1_flat-Connects_sf.stl

MATERIAL PLA, Weight: ~ 2 g

ADDITIONAL SETTINGS

None required



PLANEPRINT SEA FURY

The information about the basic settings you can find on our website at PRINT. **Please note the additional settings for the individual parts!**



P1_Gear Tail_sf.stl

MATERIAL PLA, Weight: ~ 6 g

ADDITIONAL SETTINGS

None required



P1_Hinges Aileron_sf.stl

MATERIAL PLA, Weight: ~ 2 g

ADDITIONAL SETTINGS

• Print twice



PLANEPRINT SEA FURY

The information about the basic settings you can find on our website at PRINT. **Please note the additional settings for the individual parts!**



P1_Hinges Flap_sf.stl

MATERIAL PLA, Weight: ~ 2 g

ADDITIONAL SETTINGS

• Print twice



P1_Hinges Tail_sf.stl

MATERIAL PLA, Weight: ~ 4 g

ADDITIONAL SETTINGS

None required



The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts!



P1_Landing Light L_sf.stl and P1_Landing Light R_sf.stl

MATERIAL PLA, Weight: ~ 1 g

ADDITIONAL SETTINGS

None required

TIP Use transparent filament

For optimum printing, transparent filaments should always be dried.



MATERIAL PLA

ADDITIONAL SETTINGS

Depending on the length of your motor, change the Z-height (not X and Y!) in the slicer to achieve the correct motor position (see description Motor assembling)





The information about the basic settings you can find on our website at PRINT. **Please note the additional settings for the individual parts!**



P1_Motor Plate_sf.stl

MATERIAL Tough PLA, Weight: ~ 24 g

ADDITIONAL SETTINGS

None required

NOTE These part hold the motor and must be **absolutely stable**! Ensure good layer adhesion.



P1_Motormount_sf.stl

MATERIAL Tough PLA, Weight: ~ 29 g

ADDITIONAL SETTINGS

None required

NOTE These part hold the motor and must be **absolutely stable**! Ensure good layer adhesion.



The information about the basic settings you can find on our website at PRINT. **Please note the additional settings for the individual parts!**



P1_Parts_sf.stl

MATERIAL PLA, Weight: ~ 8 g

ADDITIONAL SETTINGS

None required

P1_Prop Balancer 8-10_sf.stl

MATERIAL PLA

ADDITIONAL SETTINGS

None required

To balance your prop perfectly, insert a piece of carbon rod Ø3mm through the hole. Then place the prop on the balancer and check whether it is heavier on one side. Grind away some of the edge arc until the prop is absolutely balanced.





The information about the basic settings you can find on our website at PRINT. **Please note the additional settings for the individual parts!**



P1_Protectors_sf.stl

MATERIAL PLA, Weight: ~ 16 g

ADDITIONAL SETTINGS

None required



P1_Servomount AIL_sf.stl

MATERIAL PLA, Weight: ~ 12 g

ADDITIONAL SETTINGS

None required





The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts!



P1_Spinner X*blade X**_sf.stl

MATERIAL PLA, Weight: ~ 18 g

ADDITIONAL SETTINGS

None required

* for 3 or 2 blade Prop ** for 8 or 10 mm motor shaft



P1_Spinner_sf.stl

MATERIAL PLA, Weight: ~ 15 g

ADDITIONAL SETTINGS

• Set Z-Seam to Random so that the spinner does not generate vibrations!



The information about the basic settings you can find on our website at PRINT. **Please note the additional settings for the individual parts!**



P1_T-Connects_sf.stl

MATERIAL PLA, Weight: ~ 5 g

ADDITIONAL SETTINGS

None required







The information about the basic settings you can find on our website at PRINT. **Please note the additional settings for the individual parts!**

P2

P2_Battery plate_sf.stl

MATERIAL PLA, Weight: ~ 20 g

ADDITIONAL SETTINGS

None required



P2_Engine_sf.stl

MATERIAL PLA, Weight: ~ 40 g

ADDITIONAL SETTINGS

- Wall Line Count/Perimeters: 1
- Top Layers: 1
- Bottom Layers: 1
- Infill: 6 %



The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts!



P2 Gear cover L sf.stl and P2 Gear cover R sf.stl

MATERIAL Tough PLA, Weight: ~ 21 g

ADDITIONAL SETTINGS

- Wall Line Count/Perimeters: 3
- Top Layers: 3
- Bottom Layers: 3
- activate Support (and remove later)



MATERIAL PLA, Weight: ~ 12 g

ADDITIONAL SETTINGS

activate Support (and remove later)





The information about the basic settings you can find on our website at PRINT. **Please note the additional settings for the individual parts!**

P2

P2_Gear parts 1_sf.stl

MATERIAL PLA, Weight: ~ 8 g

ADDITIONAL SETTINGS

None required



P2_Gear parts 2_sf.stl

MATERIAL PLA, Weight: ~ 3 g

ADDITIONAL SETTINGS

None required



The information about the basic settings you can find on our website at PRINT. **Please note the additional settings for the individual parts!**

P2

P2_Gear Tail_sf.stl

MATERIAL PLA, Weight: ~ 6 g

ADDITIONAL SETTINGS

None required

P2_Hook_sf.stl

• activate Support

MATERIAL PLA, Weight: ~ 5 g

ADDITIONAL SETTINGS





The information about the basic settings you can find on our website at PRINT. **Please note the additional settings for the individual parts!**



P2_Parts_sf.stl

MATERIAL PLA, Weight: ~ 14 g

ADDITIONAL SETTINGS

None required



P2_Pilot tube_sf.stl

MATERIAL PLA, Weight: ~ 2 g

ADDITIONAL SETTINGS

• activate Support



The information about the basic settings you can find on our website at PRINT. **Please note the additional settings for the individual parts!**

P2

P2_Rim back_sf.stl

MATERIAL PLA, Weight: ~ 3 g

ADDITIONAL SETTINGS

None required



P2_Rim_sf.stl

MATERIAL PLA, Weight: ~ 15 g

ADDITIONAL SETTINGS

• Print twice



The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts!

P2_Servocovers AIL_sf.stl

MATERIAL PLA, Weight: ~ 12 g

ADDITIONAL SETTINGS

None required



P2_Wingmount_sf.stl

MATERIAL PLA, Weight: ~ 14 g

ADDITIONAL SETTINGS

None required



The information about the basic settings you can find on our website at PRINT. **Please note the additional settings for the individual parts!**



P2_Carbon tool 10mm.stl and

MATERIAL PLA

ADDITIONAL SETTINGS

None required







PROFILE P4_Flex LW TPU (A95/VarioShore)

The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts!



P4_Tire back_sf.stl

MATERIAL VarioShore or TPU A95

Weight: ~ 6 g (VarioShore)

ADDITIONAL SETTINGS

VarioShore with Flow 70 %:

- Wall Line Count: 5
- Top Layers: 5
- Bottom Layers: 5
- Infill Density: 10 %
- Infill Pattern: Gyroid

TPU A95:

- Wall Line Count: 3
- Top Layers: 3
- Infill Density: 6 %
- Infill Pattern: Gyroid



P4_Tire_sf.stl

MATERIAL LW-TPU (recommended), Weight: ~ 25 g (VarioShore)

ADDITIONAL SETTINGS

• Print twice

VarioShore with Flow 70 %:

- Wall Line Count: 5
- Top Layers: 5
- Bottom Layers: 5
- Infill Density: 10 %
- Infill Pattern: Gyroid

TPU A95:

- Wall Line Count: 3
- Top Layers: 3

RINTcom

- Infill Density: 6 %
- Infill Pattern: Gyroid

PROFILE P4_Flex LW TPU (A95/VarioShore)

The information about the basic settings you can find on our website at PRINT. **Please note the additional settings for the individual parts!**

P4

P4_Wing parts_sf.stl

MATERIAL TPU, Weight: ~ 2 g

ADDITIONAL SETTINGS

• Infill/Fill: 100 %





MATERIAL TPU, Weight: ~ 4 g

ADDITIONAL SETTINGS

- Infill/Fill: 100 %
- Print 3 times





The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

Basic settings for LW-PLA: Please follow the instructions in our **WINGTEST AND CALIBRATION TOOL** on our website for correct adjustment! Print only one STL at a time!

P5_Ail L 1_sf.stl <mark>and</mark> P5_Ail R 1_sf.stl

MATERIAL LW PLA, Weight: ~ 10 g

TIME ~ 1 hour 40 minutes

ADDITIONAL SETTINGS

None required

Unfortunately, stringing is unavoidable with this part and it has to be reworked a little with a knife and sandpaper.



P5_Ail L 2_sf.stl and P5_Ail R 2_sf.stl

MATERIAL LW PLA, Weight: ~ 13 g

TIME ~ 2 hours

ADDITIONAL SETTINGS

None required







The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

Basic settings for LW-PLA: Please follow the instructions in our WINGTEST AND CALIBRATION TOOL on our website for correct adjustment! Print only one STL at a time!

P5 Ail L 3 sf.stl and P5 Ail R 3 sf.stl

MATERIAL LW PLA, Weight: ~ 7 g

TIME ~ 1 hour

ADDITIONAL SETTINGS

None required

P5_Air flap L_sf.stl and P5_Air flap R_sf.stl

MATERIAL LW PLA, Weight: ~ 2 g



ADDITIONAL SETTINGS

• use brim







The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

Basic settings for LW-PLA: Please follow the instructions in our WINGTEST AND CALIBRATION TOOL on our website for correct adjustment! Print only one STL at a time!

P5_Air Intake 1_sf.stl

MATERIAL LW PLA, Weight: ~ 5 g

TIME ~ 50 minutes

ADDITIONAL SETTINGS

None required

P5_Air Intake 2_sf.stl

MATERIAL LW PLA, Weight: ~ 1 g

TIME ~ 8 minutes

ADDITIONAL SETTINGS

None required







The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

Basic settings for LW-PLA: Please follow the instructions in our WINGTEST AND CALIBRATION TOOL on our website for correct adjustment! Print only one STL at a time!

P5_Canopy Frame_sf.stl

MATERIAL LW PLA, Weight: ~ 11 g

TIME ~ 2 hours

ADDITIONAL SETTINGS



P5 Cover 1 sf.stl

MATERIAL LW PLA, Weight: ~ 24 g

TIME ~ 4 hours 30 minutes

ADDITIONAL SETTINGS

None required







The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

PLANEPRINT SEA FURY

Basic settings for LW-PLA: Please follow the instructions in our **WINGTEST AND CALIBRATION TOOL** on our website for correct adjustment! Print only one STL at a time!

P5_Cover 2_sf.stl

MATERIAL LW PLA, Weight: ~ 12 g

TIME ~ 2 hours 20 minutes

ADDITIONAL SETTINGS

None required



P5_Cowling_sf.stl

MATERIAL LW PLA, Weight: ~ 27 g

TIME ~ 4 hours 30 minutes

ADDITIONAL SETTINGS

None required







The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

Basic settings for LW-PLA: Please follow the instructions in our WINGTEST AND CALIBRATION TOOL on our website for correct adjustment! Print only one STL at a time!

P5_ELE L 1_sf.stl and P5 ELE R 1 sf.stl

MATERIAL LW PLA, Weight: ~ 12 g

TIME ~ 2 hours

ADDITIONAL SETTINGS

None required

P5_ELE L 2_sf.stl and P5_ELE R 2_sf.stl

MATERIAL LW PLA, Weight: ~ 8 g

TIME ~ 1 hour 20 minutes

ADDITIONAL SETTINGS

None required







The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

Basic settings for LW-PLA: Please follow the instructions in our **WINGTEST AND CALIBRATION TOOL** on our website for correct adjustment! Print only one STL at a time!

P5_Flap L 1_sf.stl and P5_Flap R 1_sf.stl

MATERIAL LW PLA, Weight: ~ 11 g

TIME ~ 2 hours

ADDITIONAL SETTINGS

None required



P5_Flap L 2_sf.stl and P5_Flap R 2_sf.stl

MATERIAL LW PLA, Weight: ~ 10 g



ADDITIONAL SETTINGS

None required







The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

Basic settings for LW-PLA: Please follow the instructions in our **WINGTEST AND CALIBRATION TOOL** on our website for correct adjustment! Print only one STL at a time!

P5_FUS 1_sf.stl

MATERIAL LW PLA, Weight: ~ 80 g

TIME ~ 13 hours

ADDITIONAL SETTINGS

None required



P5_FUS 2_sf.stl

MATERIAL LW PLA, Weight: ~ 90 g

TIME ~ 15 hours 30 minutes

ADDITIONAL SETTINGS

None required



Remove support. Please be careful with the knife!







The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

Basic settings for LW-PLA: Please follow the instructions in our **WINGTEST AND CALIBRATION TOOL** on our website for correct adjustment! Print only one STL at a time!

P5_FUS 3 up_sf.stl

MATERIAL LW PLA, Weight: ~ 25 g

TIME ~ 4 hours

ADDITIONAL SETTINGS

None required





P5_FUS 3_sf.stl

MATERIAL LW PLA, Weight: ~ 110 g

TIME ~ 19 hours

ADDITIONAL SETTINGS

None required



Remove support. Please be careful with the knife!







The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

Basic settings for LW-PLA: Please follow the instructions in our **WINGTEST AND CALIBRATION TOOL** on our website for correct adjustment! Print only one STL at a time!

P5_FUS 4_sf.stl

MATERIAL LW PLA, Weight: ~ 100 g

TIME ~ 17 hours

ADDITIONAL SETTINGS

• use brim



P5_FUS 5_sf.stl

MATERIAL LW PLA, Weight: ~ 65 g

TIME ~ 13 hours

ADDITIONAL SETTINGS

None required





The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

PLANEPRINT SEA FURY

Basic settings for LW-PLA: Please follow the instructions in our **WINGTEST AND CALIBRATION TOOL** on our website for correct adjustment! Print only one STL at a time!

P5_FUS 6_sf.stl

MATERIAL LW PLA, Weight: ~ 55 g

TIME ~ 10 hours

ADDITIONAL SETTINGS

None required



P5_Gear Doors_sf.stl

MATERIAL LW PLA, Weight: ~ 3 g

TIME ~ 20 minutes

ADDITIONAL SETTINGS

None required







The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

Basic settings for LW-PLA: Please follow the instructions in our WINGTEST AND CALIBRATION TOOL on our website for correct adjustment! Print only one STL at a time!

P5 HS L 1 sf.stl and P5 HS R 1 sf.stl

MATERIAL LW PLA, Weight: ~ 27 g

TIME ~ 4 hours

ADDITIONAL SETTINGS

None required

P5 HS L 2 sf.stl and P5_HS R 2_sf.stl

MATERIAL LW PLA, Weight: ~ 7 g

TIME	~ 1	hour
------	-----	------

ADDITIONAL SETTINGS

None required





PRINTING & ASSEMBLING MANUAL © PLANEPRINT



The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

Basic settings for LW-PLA: Please follow the instructions in our **WINGTEST AND CALIBRATION TOOL** on our website for correct adjustment! Print only one STL at a time!

P5_Rudder 1_sf.stl

MATERIAL LW PLA, Weight: ~ 18 g

TIME ~ 2 hours 30 minutes

ADDITIONAL SETTINGS

None required



P5_Rudder 2_sf.stl

MATERIAL LW PLA, Weight: ~ 17 g

TIME ~ 3 hours

ADDITIONAL SETTINGS

None required





The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

Basic settings for LW-PLA: Please follow the instructions in our WINGTEST AND CALIBRATION TOOL on our website for correct adjustment! Print only one STL at a time!

P5_VS 1_sf.stl

MATERIAL LW PLA, Weight: ~ 7 g

TIME ~ 1 hour

ADDITIONAL SETTINGS

None required



P5_VS 2_sf.stl

MATERIAL LW PLA, Weight: ~ 17 g

TIME ~ 2 hours 30 minutes

ADDITIONAL SETTINGS

None required





The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

PLANEPRINT SEA FURY

Basic settings for LW-PLA: Please follow the instructions in our **WINGTEST AND CALIBRATION TOOL** on our website for correct adjustment! Print only one STL at a time!

P5_Wing inside L 1_sf.stl and P5_Wing inside R 1_sf.stl

MATERIAL LW PLA, Weight: ~ 70 g

TIME ~ 11 hours

ADDITIONAL SETTINGS

None required



P5_Wing inside L 2_sf.stl and P5_Wing inside R 2_sf.stl

MATERIAL LW PLA, Weight: ~ 60 g

TIME ~ 10 hours

ADDITIONAL SETTINGS

None required







The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

Basic settings for LW-PLA: Please follow the instructions in our **WINGTEST AND CALIBRATION TOOL** on our website for correct adjustment! Print only one STL at a time!

P5_Wing L 1_sf.stl and P5_Wing R 1_sf.stl

MATERIAL LW PLA, Weight: ~ 78 g

TIME ~ 13 hours

ADDITIONAL SETTINGS

None required

P5_Wing L 2_sf.stl and P5_Wing R 2_sf.stl

MATERIAL LW PLA, Weight: ~ 19 g

TIME ~ 3 hours

ADDITIONAL SETTINGS

None required







The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

Basic settings for LW-PLA: Please follow the instructions in our **WINGTEST AND CALIBRATION TOOL** on our website for correct adjustment! Print only one STL at a time!

P5_Wing L 3_sf.stl and P5_Wing R 3_sf.stl

MATERIAL LW PLA, Weight: ~ 45 g

TIME ~ 7 hours

ADDITIONAL SETTINGS

None required

P5_Wing L 4_sf.stl and P5_Wing R 4_sf.stl

MATERIAL LW PLA, Weight: ~ 5 g



ADDITIONAL SETTINGS

None required







The information about the basic settings you can find on our website at PRINT. Please note the additional settings for the individual parts! It is essential to print these parts with foaming LW-PLA (pre-foamed is heavier)!

Basic settings for LW-PLA: Please follow the instructions in our WINGTEST AND CALIBRATION TOOL on our website for correct adjustment! Print only one STL at a time!

P5_Wing L 5_sf.stl and P5_Wing R 5_sf.stl

MATERIAL LW PLA, Weight: ~ 40 g

TIME ~ 6 hours

ADDITIONAL SETTINGS

None required

P5_Winglet L_sf.stl and P5_Winglet R_sf.stl

MATERIAL LW PLA, Weight: ~ 3 g



ADDITIONAL SETTINGS

None required





Basic Information:



Gluing the parts printed with PROFILE P5

- STEP 1 As a first step, it is important to roughen and smooth the adhesive surfaces with sandpaper.
- **STEP 2** Insert the **interconnects into the slots** provided on one side.
- **STEP 3** Apply **a lot of glue** to the side with the interconnects. It is important that there is glue everywhere, especially on the outside and inside of the wall surfaces, in order to achieve a perfect connection. The interconnects only serve to align the parts to each other. It is better **not** to apply glue here, otherwise it can happen that the glue suddenly hardens while the parts are being put together and stops the process.

Use medium viscosity CA glue, thinner glue would run down the parts too easily.

After assembly, **align the two parts exactly** and wipe off the excess CA glue from the surface with a cloth. Now spray with activator spray along the gluing surface and carefully press the parts together.

STEP 4 Clean the glued areas slightly with a **sharp-bladed** cutter.



PROFILES 5 parts are easy to repair

- **STEP 1** Using the knife, carefully remove the damaged part about 3 mm from the glue joint between two parts.
- **STEP 2** Cut wall and infill and clean the surface with sandpaper. **The top surface of the damaged part remains!**
- **STEP 3** The remaining top surface is about 1 mm thick. To compensate for this, you can move the new part to be printed down the Z axis in Cura by 1 mm.









Glue the parts as shown here:

000

::

TIP Always put all parts together **BEFORE gluing and check that everything** runs smoothly and fits exactly.



Fuselage assembly

00

00

Insert the two Ø3*1000mm carbon rods without glue into the fuselage from the front and let them protrude by about 2 mm.

Then hold the fuselage at an angle and let thin CA glue run into the gap of the rod up to the tail so that the entire rod is glued to the fuselage. Do this slowly and carefully, glue can drip out from underneath!

Glue the front ends well to the motor mount.

Carbon rods Ø3*1000mm

URY

Do the same with the two upper carbon rods.

Carbon rods Ø3*220mm

RINE.com

Canopy assembly

























Sprung retractable landing gear











Servo Elevator and Rudder





Motor mount

SAFETY FIRST Ensure that the prop does not generate any vibrations. Make sure that the motor does not get very hot (smaller prop, flying style). **Check regularly that the motor mountings are tight!**

The motor must have a length of exactly 70 mm from the motor plate to the prop support:



PLANEPRINT SEA FURY

RINTcom



RC Components



Attach the receiver to the floor with selfadhesive Velcro tape. The controller is attached with cable ties to the battery mounts or can sit right at the front under the motor.





Control Direction Test Look at the aircraft from behind



NOTE The flaps have a strong braking effect! We recommend using them rather carefully at first (maximum 30 mm down). They are not needed for take-off and you can land the Sea Fury without flaps.

The flaps must be aligned exactly the same in every position, otherwise the aircraft will not fly straight!





AGE RECOMMENDATION 14+

NOT FOR CHILDREN UNDER 14 YEARS. THIS IS NOT A TOY!

The STL data (or data processed from it, such as G codes) must never be passed on to third parties!

The purchase of the STL does not authorize the production of models for third parties.

By using the download data, an RC model airplane, called "model" for short, can be manufactured using a 3D printer. As a user of this model, only you are responsible for safe operation that does not endanger you or others, or that does not damage the model or property of others.

PLANEPRINT.com assumes no responsibility for damage to persons and property caused by pressure, transport or use of the product. Filaments, printing supplies, hardware or consumables that can not be used after faulty 3D printing will not be replaced by PLANEPRINT.com in any way.

When operating, always keep a safe distance from your model in all directions to avoid collisions and injuries.

This model is controlled by a radio signal. Radio signals can be disturbed from outside without being able to influence it. Interference can lead to a temporary loss of control.

Always operate your model on open terrains, far from cars, traffic and people.

Always follow the instructions and warnings for this product and any optional accessories (servos, receivers, motors, propellers, chargers, rechargeable batteries, etc.) carefully. Keep all chemicals, small parts and electrical components out of the reach of children.

Avoid water contact with all components that are not specially designed and protected. Moisture damages the electronics.

Never take an item of the model or accessory in your mouth as this can lead to severe injuries or even death.

Never operate your model with low batteries in the transmitter or model.

Always keep the model in view and under control. Use only fully charged batteries.

Always keep the transmitter switched on when the model is switched on.

Always remove the battery before disassembling the model.

Keep moving parts clean and dry at all times.

Always allow the parts to cool before touching them.

Always remove the battery after use.

Make sure that the Failsafe is properly set before the flight.

Never operate the model with damaged wiring.

Never touch moving parts.

We develop our models to the best of our knowledge and belief. We accept no liability for consequential damage and injuries caused by improper use or incorrectly printed parts. **Please be careful when handling motors, batteries and propellers** and only move your model with insurance and in approved places!

